

**BruControl Interface Wiring Map: Arduino Zero (Firmware v43)**

Connection ->		TCP (Network)			Serial (USB)		<- Connection
Wiring Map ->		Default	Wi-Fi	Yun	w/RTD	Default	<- Wiring Map
Firmware Prefix ->		BruControl.43.Zero.					<- Firmware Prefix
Firmware Suffix ->		F	W	Y	SR	S	<- Firmware Suffix
Interface pin #	BruControl port #						User Description (record device type and device connected)
0	N/A	N/C	N/C	N/C	N/C	N/C	
1	N/A	N/C	N/C	N/C	N/C	N/C	
2	2	D, C	D, C	D, C	D, C	D, C	
3	3	D, P, C	D, P, C	D, P, C	D, P, C	D, P, C	
4	4	D, P	D, P	D, P	D, P, R	D, P	
5	5	D, P, C, O*	N/C	D, P, C, O	D, P, C, O	D, P, C, O	
6	6	D, P	D, P, C, O*	D, P	D, P	D, P	
7	7	D, C	N/C	D, C	D, C, R	D, C	
8	8	D, P, C	D, P, C	D, P, C	D, P, C, R	D, P, C	
9	9	D, P	D, P	D, P	D, P, R	D, P	
10	10	N/C	N/C	D, P	D, P	D, P	
11	11	N/C	N/C	D, P	D, P	D, P	
12	12	N/C	N/C	D, P	D, P	D, P	
13	13	N/C	N/C	D, P, L	D, P, L	D, P, L	
A0	100	D, P, A	D, P, A	D, P, A	D, P, A	D, P, A	
A1	101	D, A	D, A	D, A	D, A	D, A	
A2	102	D, A	D, A	D, A	D, A	D, A	
A3	103	D, A	D, A	D, A	D, A	D, A	
A4	104	D, A	D, A	D, A	D, A	D, A	
A5	105	D, A	D, A	D, A	D, A	D, A	

**Notes / Key**

Instructions: Select the column for firmware used. Wire each interface pin per possible input/outputs. Select device's corresponding port in BruControl.

Ethernet 2 (F) shield/boards are Wiznet 5500 based (Ethernet 1/Wiznet 5100 not supported). Wi-Fi (W) shields/boards are WINC1500 based.

For firmware with RTD capability, all RTD Input pins are pulled HIGH on start-up. Do not wire other I/O to these pins if not appropriate for hardware.

Interface Wiring Map Codes:

D = Digital Input or Digital Output (Note: Input can be 3.3V active high or low, output is 3.3V)

P = PWM Output (Note: Output is 3.3V peak. Frequency is ~500 or ~1000 Hz. Create Analog Output using RC filter or RC/op-amp.)

C = Counter Input (Note: trigger is falling edge. Sensor must pull up/down 3.3V, otherwise an external resistor is needed)

A = Analog Input (Note: range is compared to 3.3V, referenced to ground).

O = 1-Wire Input (\*Note: all 1-wire data pins must be tied to pin 5 or 6 per above only but are addressed by virtual ports 200 - 209 in BruControl).

**BruControl Interface Wiring Map: Arduino Zero (Firmware v43)**

Connection ->	TCP (Network)			Serial (USB)		<- Connection
Wiring Map ->	Default	Wi-Fi	Yun	w/RTD	Default	<- Wiring Map

R = RTD Input (via SPI board). Wire CS pin from each individual boards to these pins only. Other board pins wired in parallel - see RTD schematic.

L = Onboard LED (Note: connecting to "Active Low" or "Low Trigger" relay board may light LED when device is disabled in BruControl)

Duty Cycle and Hysteresis devices use a Digital Output (D).

PID devices on pins with both Digital (D) and PWM Output (P) will use PWM Output. For binary switches (e.g. SSR), select pin without PWM Output (P).

Note pin A0's PWM output mode is true 10 bit analog, not PWM.

Analog Reference pin (AREF) should be tied to +3.3V or less to measure analog voltage inputs.

Maximum current (sink or source) per pin is 7mA. Recommend to keep each equal or less than 5mA .