



- Use 10k NTC thermistor. Determine A,B,C coefficients from MFG or using calculator (<http://www.thinksrs.com/downloads/programs/Therm%20Calc/NTCCalibrator/NTCCalculator.htm>)
- Enter par resistor values for each thermistor into BruControl calibration.
- Repeat thermistors as needed (3 of 6 shown wired above).
- Use twisted wire for long runs from TF-3 board to thermistor.
- AREF pin must be tied to 5V pin as shown.